

ASSEMBLY INSTRUCTIONS:

Product Code : PU605M

Product Name: PU605M Medium Back Chair

TIME REQUIRED:

10 minutes

TOOLS REQUIRED:

Screwdriver, Electric Drill, Pencil, Measuring tape/Ruler

*Tools are not included.

SKILL REQUIRED:

Easy  Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert. For most products, two persons are recommended.

NOTE

- As this is a commercial product, some intermediate skills may be required.
 - No pre-drill holes or markings are provided on our table or desk tops.
 - Please check you have all hardware before assembling.
- If you are missing any hardware, please contact your Rapidline reseller. Please ensure you have the name of the item, required hardware part and quantity.
 - Please retain your receipt as proof of purchase to validate your warranty.
- Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
- Remove all wrapping materials, including staples and packing straps before you start to assemble
 - Keep all hardware parts out of reach of children.


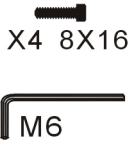
CAUTION

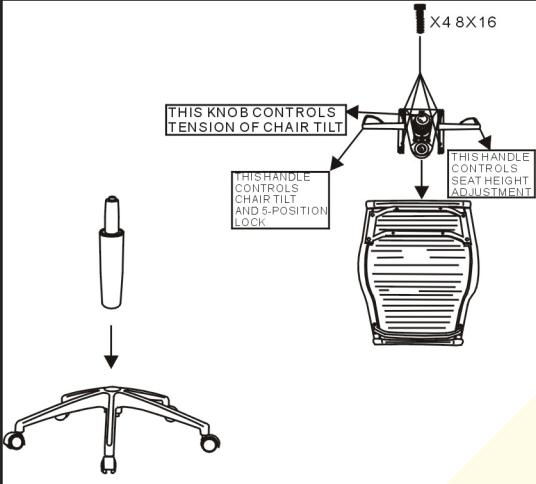
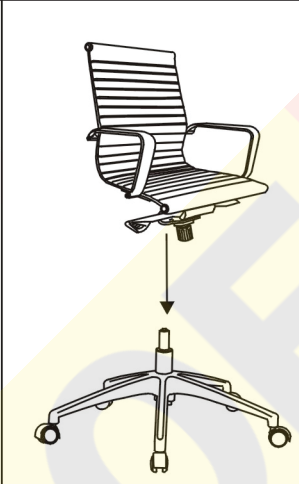
- Heavy product. Do not attempt to lift or move without help
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.

WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
- Failure to follow these warnings could result in serious injury.

PU605M

(1) Seat	(2) Arms	(3) Mechanism	(4) Star base	(5) Gasslift	(6) Tools
	 X2		 X5		 X4 8X16 M6

		CHAIR CARE ***Clean regularly. ***Use leather cleaner where leather is applicable. ***Test on concealed area before proceeding PLEASE NOTE ***This is a chair for one person to sit on. Do not stand on. ***The bolts may require tightening periodically.
1. - Insert gas lift into the base with castors - Attach mechanism onto the bottom of the seat with bolts provided	2. Push gasslift down and insert it into the slot under the seat	

