

ASSEMBLY INSTRUCTIONS:

Product Code : SPC12 / SPC18

Product Name: Corporate Range Credenza

TIME REQUIRED:

35 minutes

TOOLS REQUIRED:

Screwdriver, Electric Drill, Pencil, Measuring tape/Ruler

*Tools are not included.

SKILL REQUIRED:

Easy



Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert. For most products, two persons are recommended.

NOTE

- As this is a commercial product, some intermediate skills may be required.
 - No pre-drill holes or markings are provided on our table or desk tops.
 - Please check you have all hardware before assembling.
- If you are missing any hardware, please contact your Rapidline reseller. Please ensure you have the name of the item, required hardware part and quantity.
 - Please retain your receipt as proof of purchase to validate your warranty.
- Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
- Remove all wrapping materials, including staples and packing straps before you start to assemble
 - Keep all hardware parts out of reach of children.

CAUTION


- Heavy product. Do not attempt to lift or move without help
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.

WARNING








- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
- Failure to follow these warnings could result in serious injury.

ASSEMBLY INSTRUCTIONS


SPC18

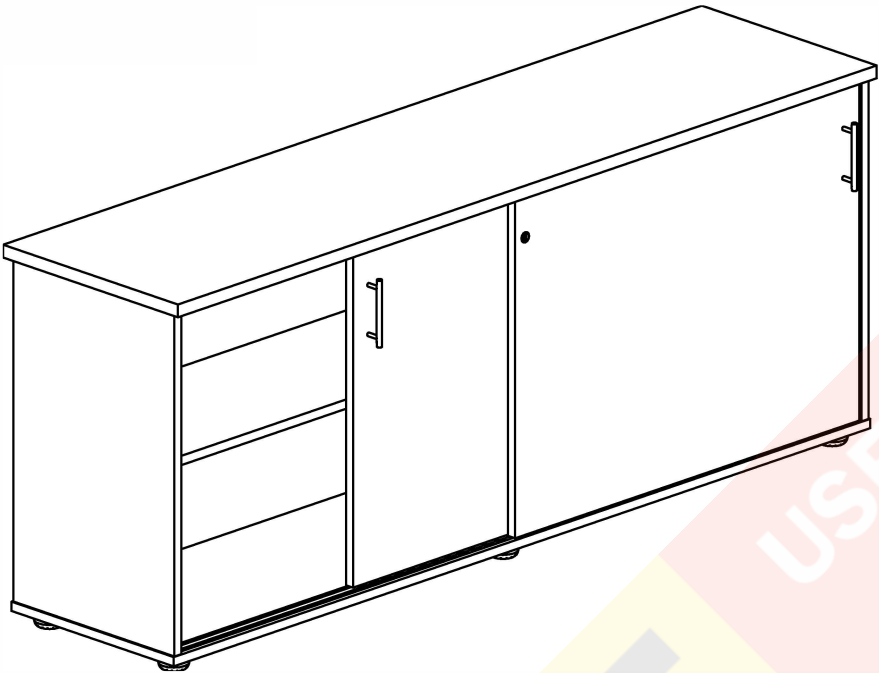


pin 1 24PCS	6x35 CAM 2 24PCS
Cam Cover 3 24PCS	Bolt Mix 18H1A 4 8PCS
T-Handle 5 2PCS	Screw 4x22 6 4PCS
CUSHION 25H1A 7 6PCS	Screw 4x30 8 6PCS
LOCK 9 1PCS	Screw 3.5X13 10 2PCS

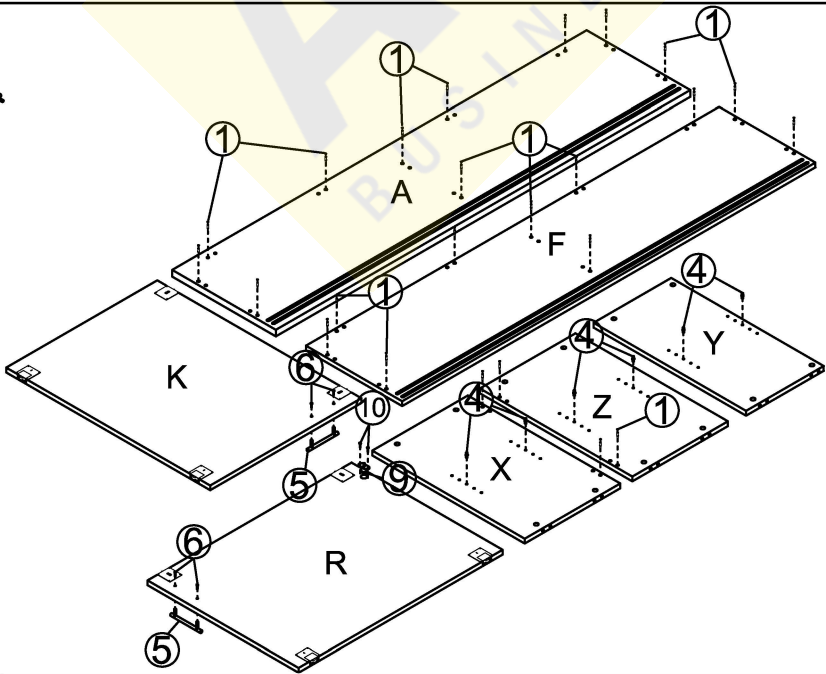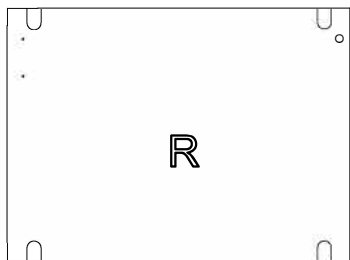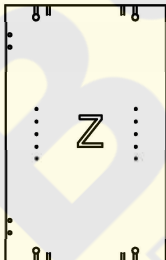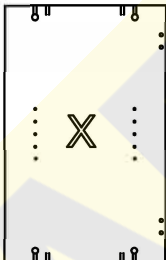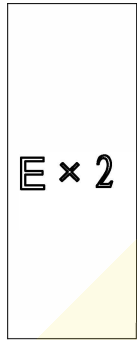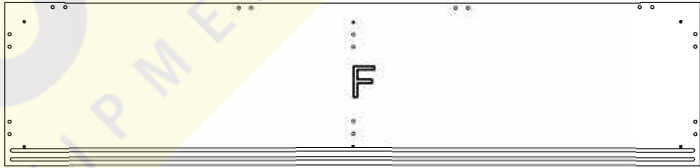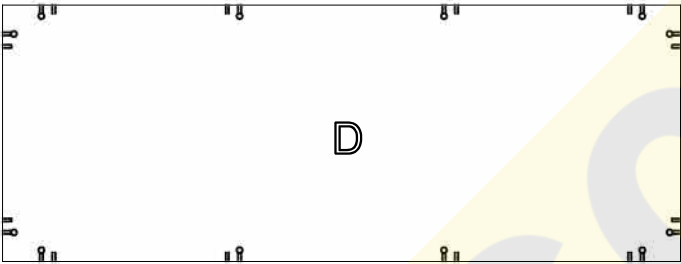


1

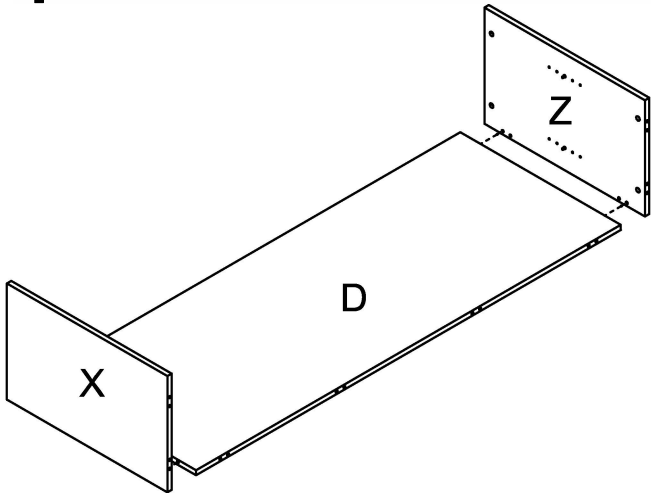


2

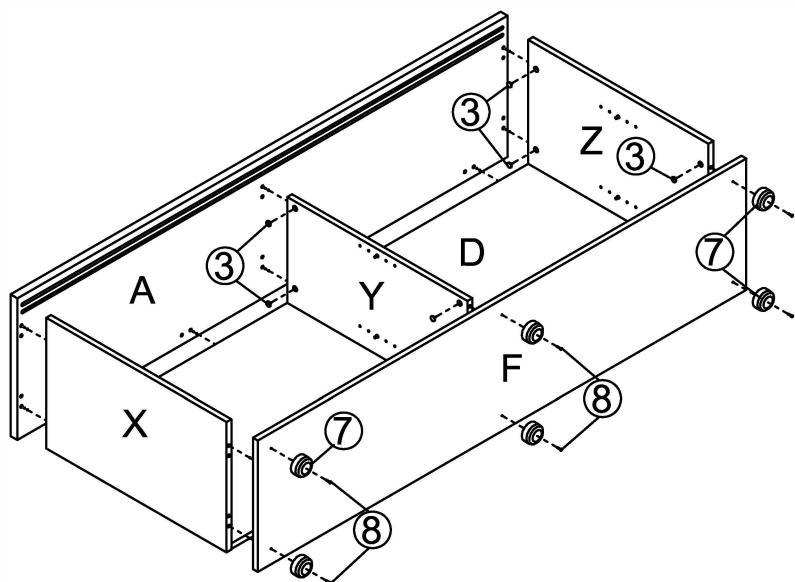


3

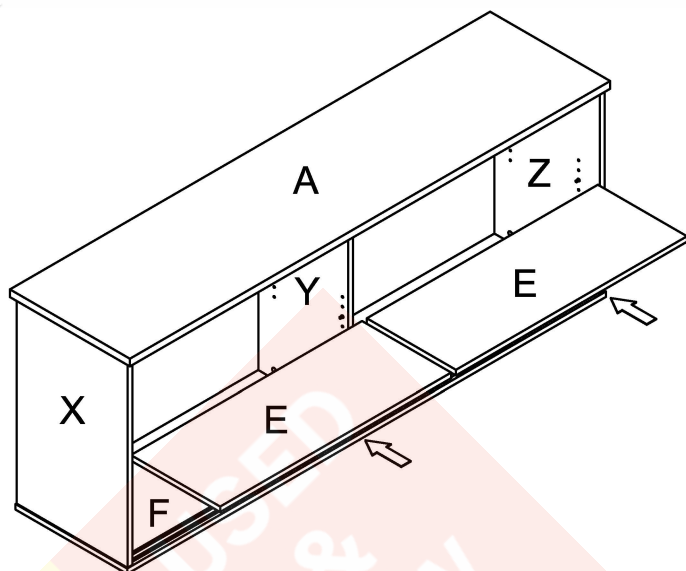



4

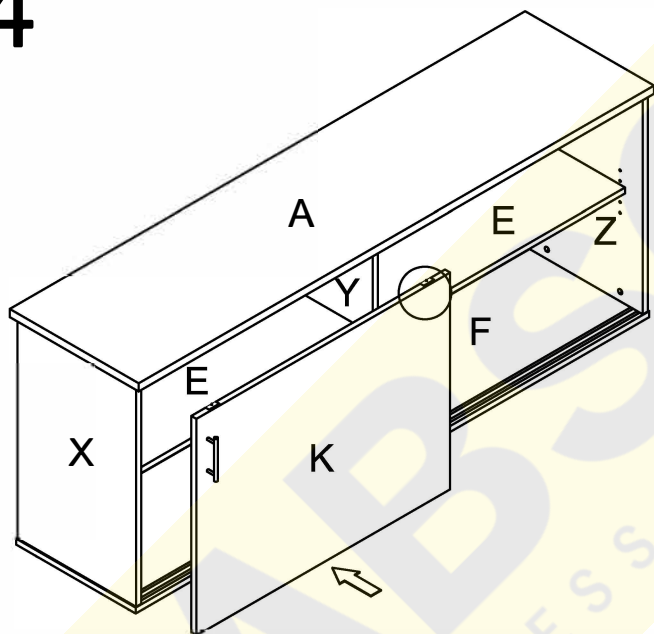

5

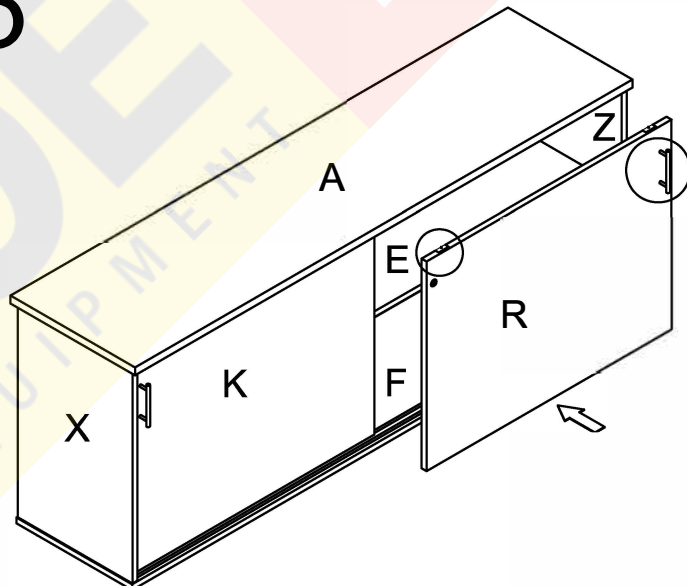




6


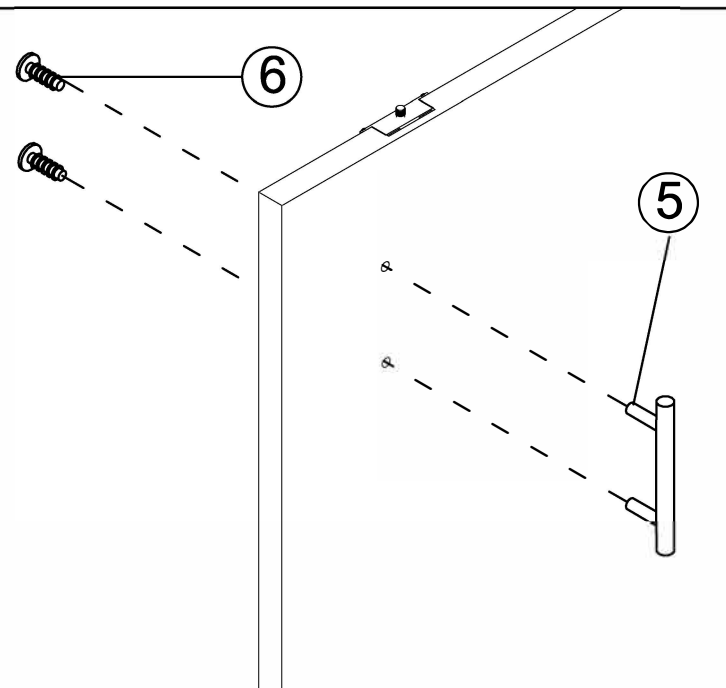
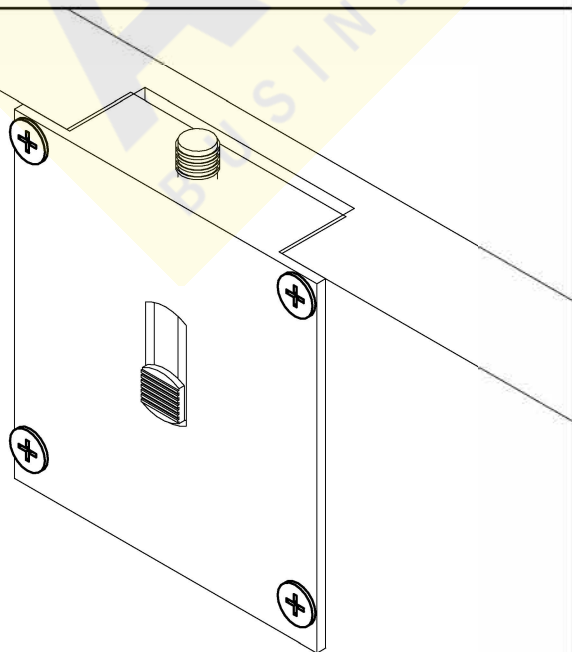


ASSEMBLY INSTRUCTIONS


SPC12

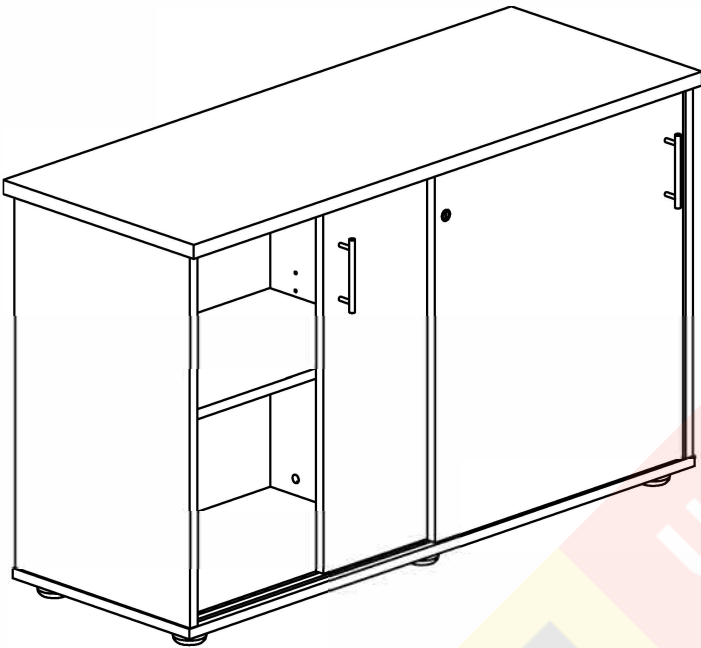


 pin 1 20PCS	 CAM 2 20PCS
 Cam Cover 3 20PCS	 Bolt M8x16 4 8PCS
 T-Handle 5 2PCS	 Screw 4x22 6 4PCS
 CUSHION 7 6PCS	 Screw 4x30 8 6PCS
 LOCK 9 1PCS	 Screw 3.5x13 10 2PCS
	

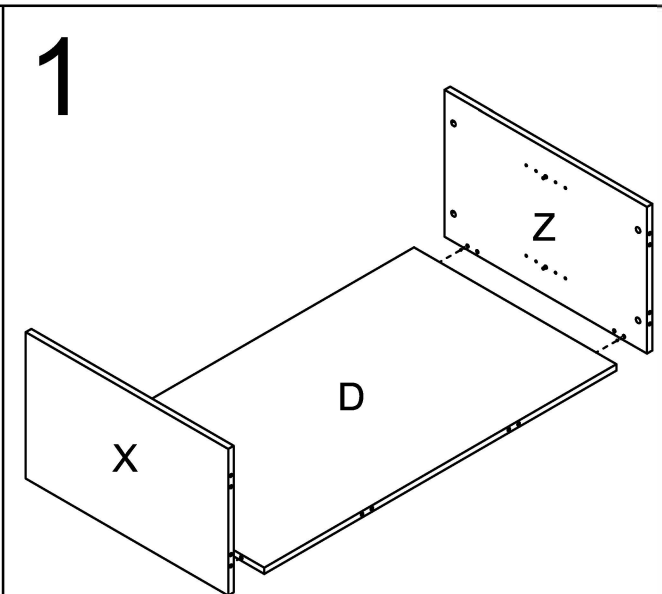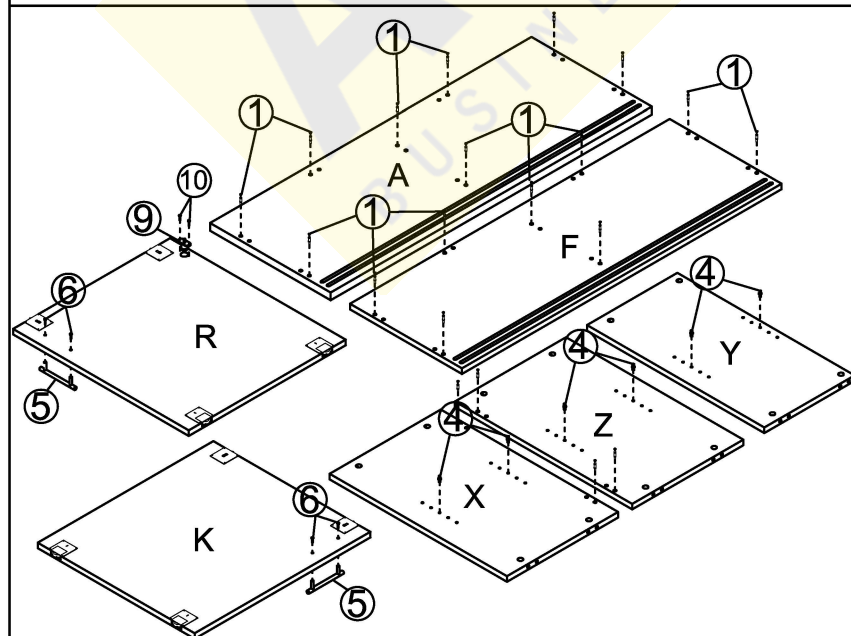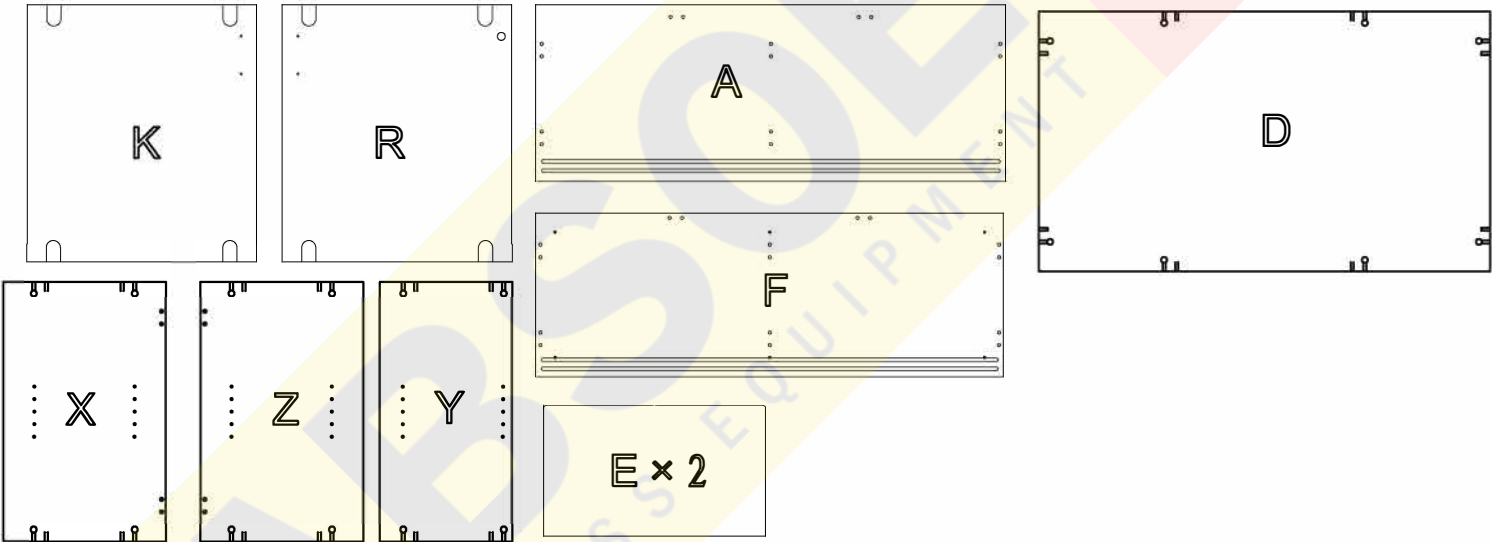


2

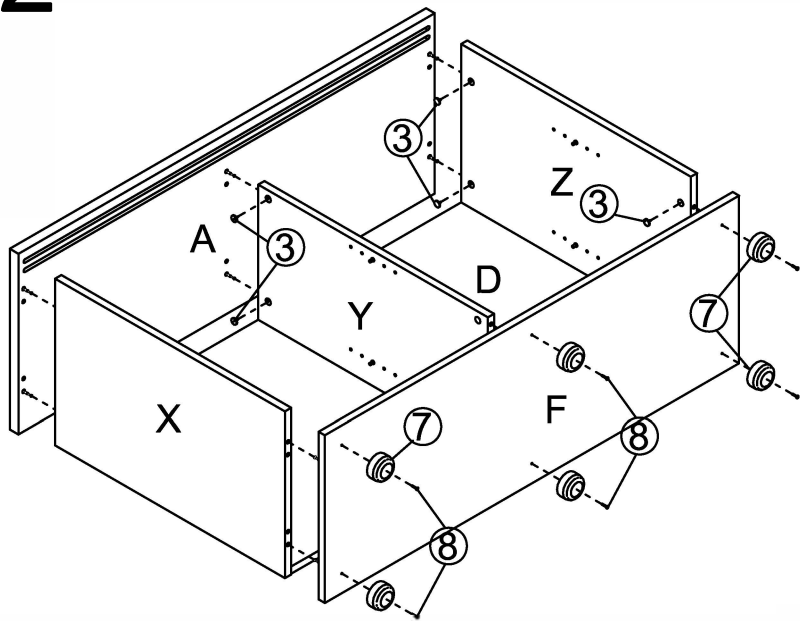


3

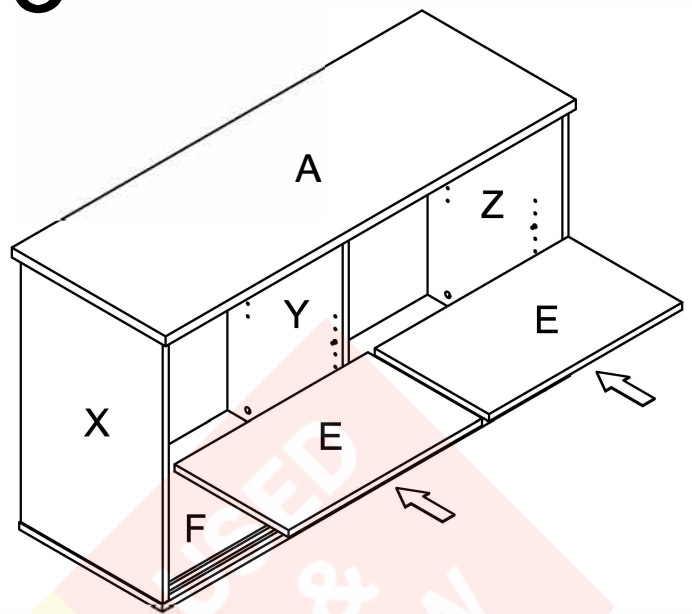


4

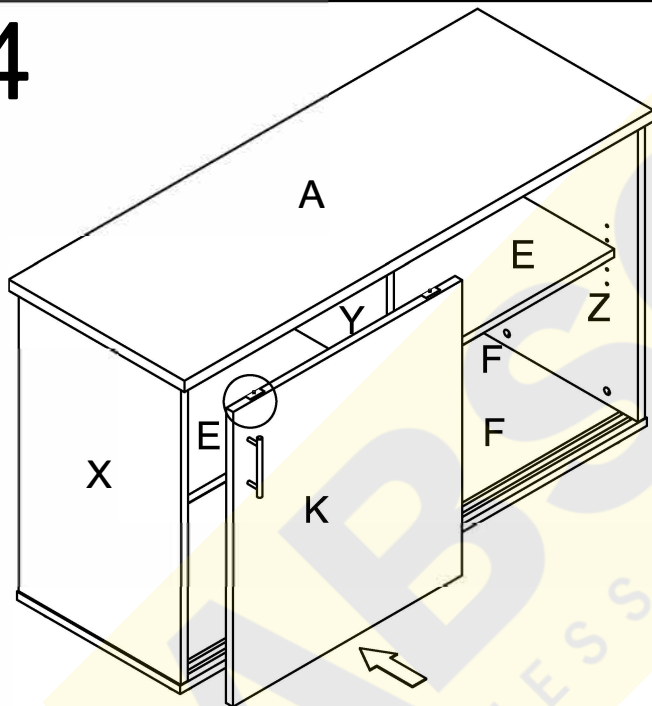

5

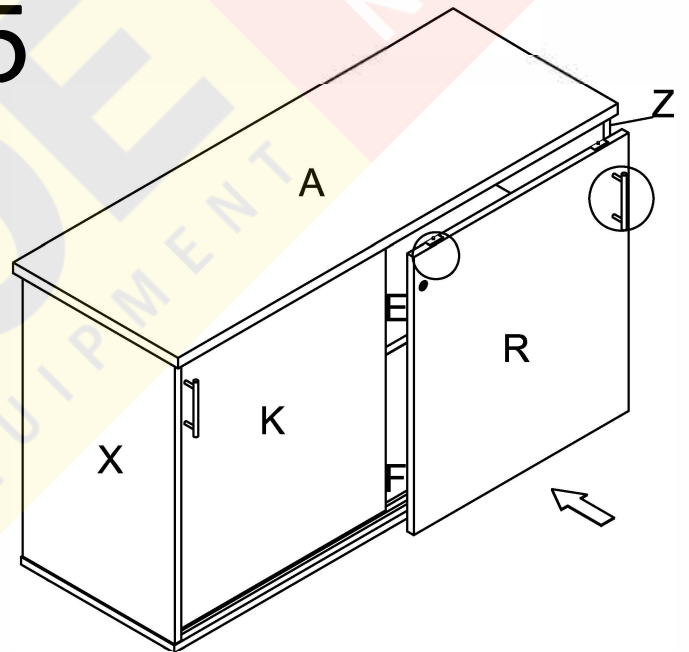

6

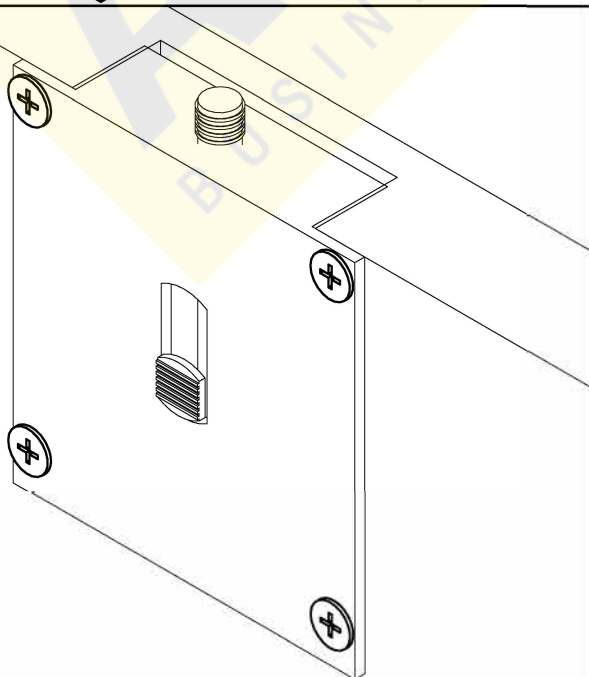

6

